




Celtic Magic

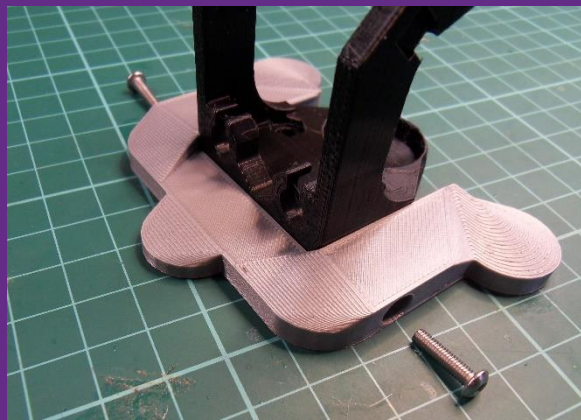


DANGLE

Mounting Options: Instructions

Version 220524

Removing the Standard Support Frame

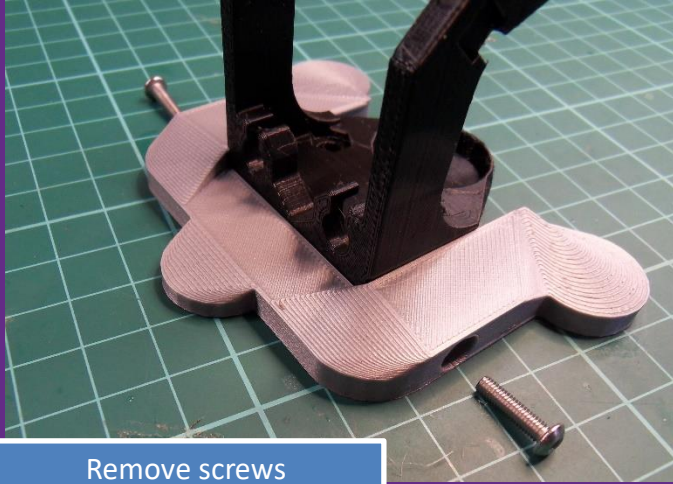

Remove screws



Remove the two retention screws
Slide the silver base back from the frame

To Refit:

Slide the base back onto the frame do not snap it into place slide it.
Refit the screws fully. Do not over tighten as they thread into plastic


Fitting a Camera Mount

Part CM/D_CamMount




The hex dome nuts fit into the hex shaped sockets in the frame of the Dangle.

Fit one nut using pointed nose pliers and hold with your finger, then fit the screw loosely before fitting the second nut and screw and then tightening all.

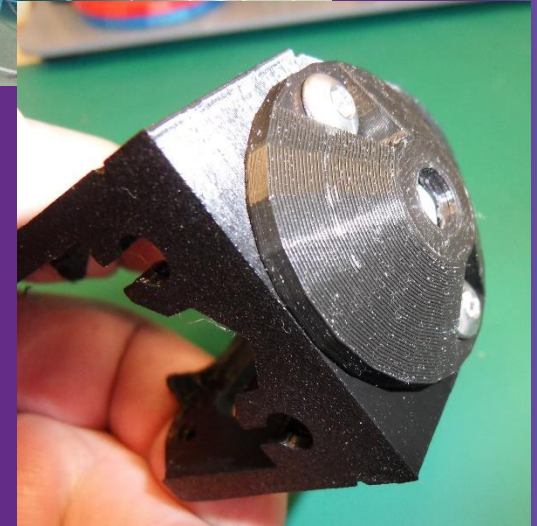


Fitting to a Hand Support Base

Part CM/HSB(no.)/D

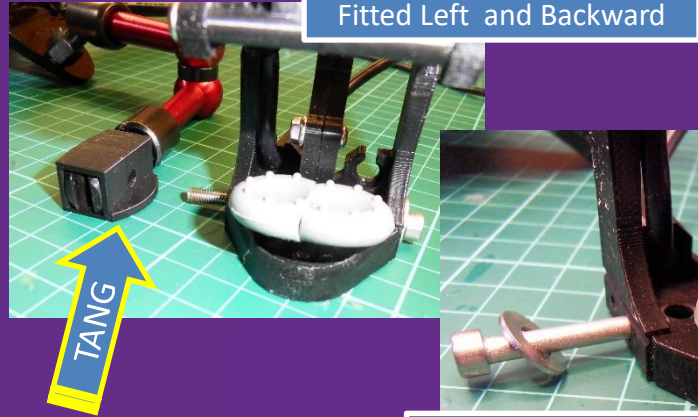

Fitted Left and Backward

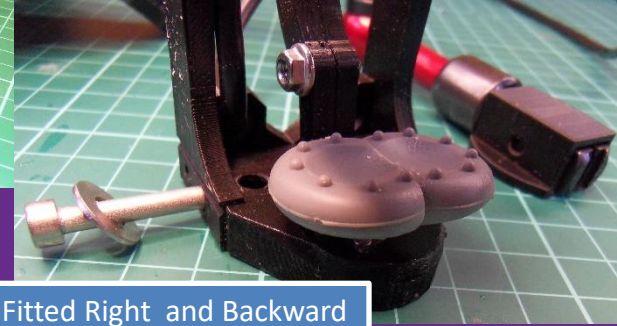

Fitted Right and Backward

- Remove the standard base
- Choose what side you want to fit the mount to the Dangle. The arm could also come forward (Backward is illustrated)
- Fit the Carrier piece on to the articulated arm noting that the Tang installs under the frame of the Dangle to prevent rotation around the main screw
- Insert the long screw with washer and screw through the hole in the Carrier into the threaded steel of the articulated arm & tighten firmly
- The articulated arm is mounted on to the plastic Hand Support Base in a hole suitable for end use and the angles adjusted to suit the user
- The main black knob on the arm tightens all articulated joints
- Note the slots at each end of the arm that allows extreme angles to be obtained from the ball joints

